
PicoLAS

FOCUSSING POWER TO THE POINT

Rev. 1905

LDP-CW 90-10

Fully digital controlled cw Driver for High Power Laser Diodes

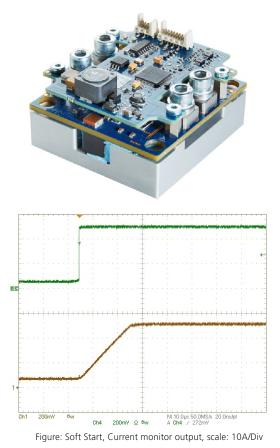

Product Description

The LDP-CW 90-10 is a very affordable, compact and efficient current supply for an output power up to 1 kW.

The capability ranges from continuous output current to analog modulated waveforms like sinusoidal, rectangular or triangular. The modulation is limited usually by the load inductance.

Intended fields of application are laser soldering and welding as well as generic surface treatment and show lasers.

The innovative current regulation concept of the LDP-CW 90-10 produces, compared to the commonly used linear regulation concept, considerably less losses. Hence, only one supply voltage is needed for the control logic and the power stage. The current consumption drawn from the power supply only needs to cover the average laser power and is typically much less than 90 A.

- Output current: 3 .. 90 A
- Compliance voltage: 0 .. 10 V
- Output power: 900 W
- Coverage of cw range
- Analog modulation
- Half brick size (35 cm²)
- Several protective features
- High efficiency

Technical Data*

Output current	3 90 A
Compliance voltage	0 10 V
Current ripple	< 1 %
Ripple frequency	> 1 MHz
Current overshoot	< 1 %
Analog modulation (10	TBD**
A _{pp})	
Current settling time	TBD**
(full-scale)	
Current setpoint input	Analog or digital
Current monitor	TBD**
Voltage monitor	Via RS-232
Supply voltage	24 V DC
Max. power dissipation	65 W
	Half brick size
Dimensions in mm	60.9 x 57.8 x 29
Weight	194 g
Operating temperature	0 to +55 °C

* Specifications measured with a fast recovery diode instead of a laser diode. Technical data is subject to change without further notice. ** See manual for further details

Designed to shield your laser diode from damage, the LDP-CW 90-10 features a number of powerful protective safeguards:

- Innovative current regulation concept actively prevents laser diode from overshoots and overcurrent
- Integrated Soft Start
- Overtemperature shutdown
- Enable/Disable input
- Driver status output
- Protection of the laser diode against reverse currents

Optional Accessories: LD PL

LDP-C BOB PLB-21

PicoLAS GmbH Burgstr. 2 52146 Würselen Germany

Phone: +49 (0)2405 64594 60 Fax: +49 (0)2405 64594 61